
Quick guider of HDI-BS180

Intercom configuration

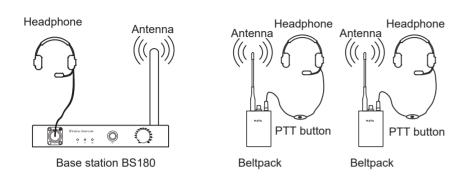

 
- 1.Install antenna and headphone to base station.
- 2. Power base station with 12V adapter.
- 3. Turn the volume knob clockwise to maximize the volume. First section of volume knob is "on", and the second section for volume adjustment. After the indicator light is on, the base station plays the "channel 10" prompt sound, and the equipment is turned on normally.
- 4.Press the CALL button to get it flash, and then talk to the beltpack with the headphone.
- 5. Turn the knob on the top of beltpack clockwise and screw it to the end, the headphone plays the channel (same as channel of base station) and power prompts (if low power, please charge it before working). The indicator light is on and the beltpack is turned on.
- 6.Keep pressing the PTT button on the headphone to turn on the microphone, and then you can can talk to the base station and other beltpack. Release the PTT button to turn the microphone off, and then you can hear but can't speak. When talking, the microphone should be within 1CM to your mouth.

Base station and beltpacks configuration

• Base station configuration



- 1.Press the CALL button for more than 5 seconds and then release it to enter the channel Settings menu, the headset will play the menu prompts.
- 2.Press CALL(press it and quickly release it, not holding it), you can change the channel with help of headphone, wait for about 5 seconds to keep configuration.
- Beltpack configuration



- 1.Press the M button beside the knob, to enter the channel Settings menu, and then the headset will play the menu prompts.
- 2.After entering the menu, press the M button and switch to the next menu. Menu includes channel settings, headphone type, usage scene, background sound suppression level, PTT mode settings, and restore factory settings.
- 3.Press the PTT button on the headset to change menu parameters, and then wait 5 seconds to automatically exit the menu. Configuration is made.