## 安装使用说明

## 1、软件下载

## <u>HdiBs180 网络设置工具</u>

2、安装 HdiBs180 网络配置工具,运行安装包"HdiBs180-NetCfg-Setup.exe",如下图:













- 3、安装完成后运行 HdiBs180 网络配置工具。
- 4、将装有 HdiBs180 网络配置工具的电脑与 BS180 通话主机使用网线连接。
- 5、BS180 开机后,软件出现连接成功后,可修改相关设置。

基础信息 ———						
	硬件序列号: 31003C000247373531363331		版本号: 1.250	版本号: 1.250		
通话设置		10		[252224040		
	频道:	10	<b>逋</b> 讯密码:	353224819		
	场景声等级:	1适合绝大多数场所,说话声音响到	▶ 背景声抑制:	2背景声抑制程度2%	•	
ally设置						
	切换台品牌:	其他	· 切换台型号:	其他	•	
	接口类型:	25针并口输入模式	25针并口类型:	通断模式	•	
网络配置						
	IP地址:	192 . 168 . 10 . 200	网络掩码:	255 . 255 . 255 . 0		
	网关地址:	192 . 168 . 10 . 1	切换台端口:	9910		
	切换台地址:	192 . 168 . 10 . 240				
		设置	1			
			_			
:44:31 等待连持	€ \ <del>/.</del> ⊥.	╤╺┿╤┷┶				
:44:33 设备连持	威功 進移	安成-以				

① 频道设置范围是: 2-90。主机、分机和 TALLY 灯频道一致才可以相互通信。

② 通信密码,主机、分机和 TALLY 灯密码一致才可以相互通信。

③ 场景声等级出厂默认1等级,一般不建议修改。

④ 背景声抑制等级出厂默认 2 等级 , 一般不建议修改。

⑤ TALLY 类型设置,根据使用切换台型号设置对应的品牌和型号。

6 网络配置,修改网络相关参数。