


## Naya TALLY Interface to Blackmagic

1. Please connect Tally interface to Blackmagic switcher(we call it BMD) as below:

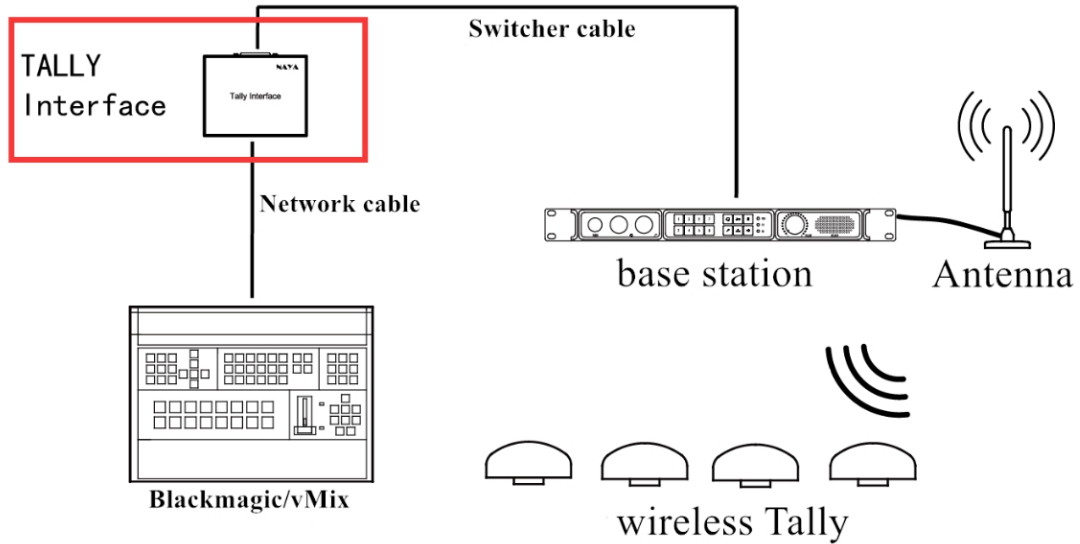

2. BMD switcher has default IP 192.168.10.240.
3. Turn on TALLY Interface、 base station、 TALLY and BMD switcher
4. Tally flash when switcher works.

Remarks: if BMD switcher IP has been changed, you have 2 solutions:

- (1) Reset to default IP of BMD switcher
- (2) Configure IP parameters of Tally interface with the help of Tally interface configuration software.