




User's manual of IPL Intercom desktop **IPL DT4300**

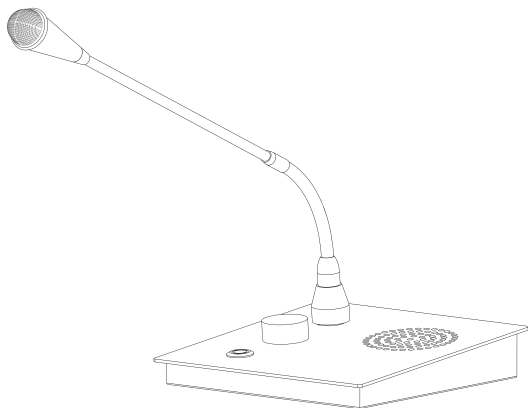

Content

1 Check the items in the package	3
2 Parts introduction	3
2.1 Panel	3
2.2 Interface	4
3 Preparation before using	4
3.1 Power up	4
3.2 Access network	5
3.3 Install gooseneck microphone	5
3.4 Install headphone	5
4 Basic operation	5
4.1 Power on/off	5
4.2 Volume adjustment	5
4.3 Call	5
4.4 ID No. setting	6
4.5 Group No. setting	6
5 Maintenance and Cleaning	6
5.1 Maintenance	6
5.2 Cleaning	6
6 Warranty and Maintenance Terms	7
6.1 Scope and duration of warranty	7
6.2 Warranty application	7
7 Warranty card	7


1 Check the items in the package

The package contains the following items, if any damage or loss, please contact Naya or the dealer you purchased from.

No.	Item	Q'ty
①	Desktop	1
②	Gooseneck microphone	1
③	Headphone(optional)	1
④	Power cable	1
⑤	Manual	1

2 Parts introduction

2.1 Panel

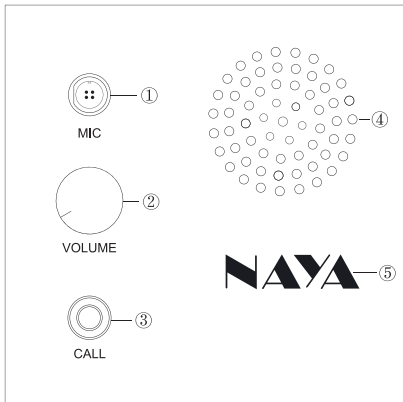

NAYA



Please read the manual carefully before using the product


Website: <http://www.nayatec.com>

Manufacturer: Shanghai Naya Intelligence Technology. Co.,Ltd.

Address: No.7001 Zhongchun RD., Minhang district, Shanghai, 201101, China

No.	Items	Description
①	MIC	Gooseneck microphone
②	VOLUME	Power switch/volume knob, the sound changes from low to high when the knob is turned clockwise
③	CALL	Voice transmit button. After pressing the button, the light will turn green, the device starts to send voice. Press again, green light is off, the device enters the listening state.
④	Speaker	Play voice through speaker
⑤	Power indicator	When the device is turned on, the LOGO emits blue light.

2.2 Interface

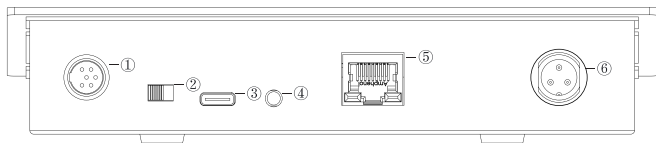

No.	Items	Description
①	Mini XLR socket	For external headphones
②	MIC selection	Choose to use the headset's MIC or gooseneck microphone input
③	Type-C interface	Dedicated configuration port
④	Line Out	Audio out
⑤	LAN port	For network voice switching
⑥	Power interface	DC 12V/2A

3 Preparation before using

3.1 Power up

3.1 Power up

The working voltage of this device is DC 12V/2A, and a dedicated power adapter is used. The power adapter is connected to AC 110/220V, good grounding is required. If used improperly, it may cause permanent damage to the equipment.

3.2 Access network

The unit must be networked with other IPL equipment. After installation, 10/100Mbps Ethernet cable must be used for connection to the local voice network.

3.3 Install gooseneck microphone

Check the notch of the gooseneck microphone plug, align it with the corresponding position of the MIC interface, press it to the end, and turn the nut clockwise until it tightens;

To remove the gooseneck microphone, turn the nut counterclockwise, and pull it out by holding the base upwards with moderate force after the detachment is completed.

3.4 Install headphone

As an option, headset can also be used with this desktop. Insert the headset into the Mini XLR socket, then turn the MIC selection button to the side of the headset. After this, the local call will use the MIC on the headset, and the sound is no longer played from the speaker.

4 Basic operation

4.1 Power on/off

Turn the volume knob clockwise, after hearing a "click", the device starts to power on, the LOGO light is on, and then you will hear the voice broadcast of the extensions number and group number.

Turn the volume knob counterclockwise to the position of VOLUME, and shut down after hearing a "click" sound.

4.2 Volume adjustment

After power on, turn the volume knob clockwise to increase the sound from small to loud, and turn the volume counterclockwise to decrease the sound gradually.

4.3 Call

Press the CALL button, hear a "beep", the button lights turn green, at this time the device can send voice, all other extensions can receive, the voice sent by other devices can also be received by this device;

Press the CALL button again, hear a "dong" sound, the light is off, the device only receives and plays the voice from other devices, and does not send voice itself, to enter the by silent state.

4.4 ID No. setting

After powering on, press and hold the CALL key for 3 seconds, and the voice prompts "ID number setting". Each time the CALL key is pressed thereafter, the ID number of the device is increased by 1 and prompted.

After the maximum number is exceeded, it will be prompts again in a loop.

After the desired ID number is prompted, do not do any operation, after waiting for 3 seconds, there will be a voice prompt that ID number setting is completed.

After the number is set, it will automatically enter the mode of only listening and not speaking. You need to press the CALL button again to restart the sending voice.

Remark: At grouping state, keep pressing the CALL and it will automatically enter the group number setting, the ID number cannot be set. You need to unplug the network cable, or turn off the grouping function of base stations(BS450 or CT4400), and then press and hold the CALL button again to enter ID number setting.

4.5 Group No. setting

After the device is powered on and connected to the voice network, there must be a wireless host BS450 or console CT4400 running in the network. Grouping function is turned on and then you can start setting group numbers.

Press and hold the CALL button for 3 seconds, then release it, and the voice prompt starts "group number setting". After that, every time you press the CALL key, the group number is incremented by 1. After the maximum number is exceeded, it will prompt again in a loop.

After the desired group number is prompted, do not do any operation, after waiting for 3 seconds, there will be a voice prompt that the group number setting is completed.

After the group number is set, it will automatically enter the mode of only listening and not speaking. You need to press the CALL key again to restart the sending voice.

5 Maintenance and Cleaning

In order to ensure the good performance of this device and prolong its service life, please be familiar with the following contents for better maintenance and cleaning.

5.1 Maintenance

Do not puncture or scratch the device with hard objects.

Do not store the device in an environment that contains corrosive electronic circuits.

5.2 Cleaning

Please clean the device regularly, and use a clean and dry towel or brush to remove the dust on the surface of the equipment.

If the device casing is dirty, it can be cleaned with neutral detergent and non-woven fabric. Do not use

detergent, alcohol or spray which will damage the device, make sure the device is completely dry, otherwise do not use it.

6 Warranty and Maintenance Terms

Naya promises that defects in material or workmanship under normal operating and maintenance conditions of all devices produced by our company, are covered by the warranty service specified below from the date of purchase.

6.1 Scope and duration of warranty

Desktop: 12 months

Gooseneck microphone: 6 months

Headphone(optional): 6 months

6.2 Warranty application

If you apply for product maintenance, please be sure to provide the warranty card or valid purchase invoice as a certificate.

During the period, the relevant signs of the products shall be kept clean and complete and shall not be torn up.

7 Warranty card

In order to protect your rights and interests, please fill in it carefully and keep it properly as a certificate for maintenance.

Reseller information			
Model		Sales date	
Reseller		Contact telephone/E-mail	
User information			
User name		Contact telephone	
Address		E-mail	